

Instructions for Dishwasher



FIG. A / ZCHNG. A



· Interruptor General
· Manin Switch

FIG. B / ZCHNG. B



· Pulsador de arranque cido luminoso
· Lunimous starting cycle button

FIG. C / ZCHNG. C



· Piloto de máquina preparada
· Machine rady light

FIG. D / ZCHNG. D



· Pulsador de vaciado
· Draining button

1. Turn on isolator switch above counter
2. Check there is yellow and blue fluid in the bottles in the cupboard to the L of the dishwasher
Ensure drain plug in base of machine has been pushed in.
3. Turn the switch control (A) to the ON position for the automatic filling of the wash tank and the connection of the heating elements. This will also allow detergent to be dispensed from the yellow bottle in the adjoining cupboard. If the machine does not come on, you may need coinage in the kitchen socket meter in the cloak room ; meter 1.
4. P-50: The light indicator (C) turns on when the washing temperature (55/60degC) has been reached.
5. Rinse off food debris from the plates
6. After putting the rack full of dishware into the machine, close the door. Press the backlit 'Start' push-button (B). A washing cycle starts automatically. The lamp turns off on completion of the cycle (about 4 minutes). Rinse aid will automatically be added from the blue bottle in the cupboard during the rinse phase
7. At the end of the cycle: with the door open, press the push-button (D) to start the drain pump. **With the drain plug in place**, any excess amount of water accumulated in the wash tank will be evacuated. Do not remove the plug as you will empty all the hot water!
8. Do not turn off the machine between cycles; just reload the machine; wait for the temperature ready button (seems to take 2-3 minutes) and then push button B once, and run another cycle, the machine will draw in any necessary detergent and rinse-aid
9. At the end of the day, pull out the drain plug and then with the door open empty the tank by pressing Button D until the tank is empty. Turn off the machine at Button A and then at the isolator switch. Pull out the filter with a direct upward pull and clean the filter. Do not remove the filter until the tank is empty. Replace the filter will direct pressure downwards and then replace the drain plug

